

PROGRAMMING (CONTINUED)

OPTION 3 – RE-PROGRAMMING FOR SECURITY+2.0® PRODUCTS

1. Locate the Program button on the remote control.
2. To enter the programming mode on the remote control, press the program button until the LED on the front of the remote control turns on.
3. Press and release the remote control button you wish to use:
 - 1 time for SECURITY+2.0® product (Yellow LEARN button).
4. Exit programming mode by pressing any remote control button except the button that was just programmed.
5. Press and release the yellow LEARN button on your product or the PROGRAM button on the LCD. **NOTE:** The button color on commercial products may vary.
6. Press and hold the remote control button you programmed in Step 3 until your product's programming LED turns off or the lights flash on your product.
7. To test, press the programmed button on the remote control and the product will activate.

HOW TO USE THE REMOTE CONTROL


Press and hold the button down until the door or gate starts to move. For key chain remote controls with a proximity sensor, hold the remote control 1-2" away from the reader face and wait for a confirmation beep or LED from the reader. Operation of the proximity sensor varies depending on the access control system. For additional information refer to the owner's manual for the access control system.

THE REMOTE CONTROL BATTERY

To replace battery, open the case as shown. Insert battery positive side up (+). Replace the battery with only 3V CR2032 coin cell battery. Dispose of old battery properly.


VISOR REMOTE

Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

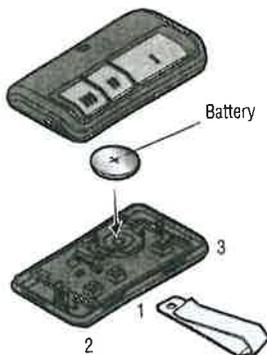

KEY CHAIN REMOTE

Pry open the case with a screwdriver blade.

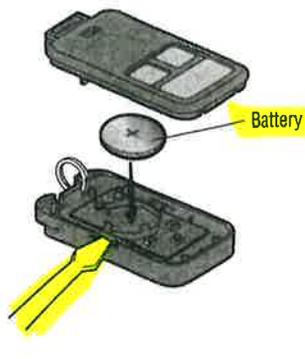

⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V CR2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212° F (100° C) or incinerate.

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

REPLACEMENT PARTS

3V CR2032 Lithium battery	10A20
Visor Clip	29B137